Weekly Maintenance of FlowTab

DO NOT OPERATE THE FLOWTAB OR HANDLE CHEMICALS UNITL:-

- 1. You have been fully trained to operate it
- 2. You have consulted with your Heath & Safety manager or procedures about handling chemicals and personal protection equipment, (advise your health and safety manager to attach a separate guide/ warning message next to this one).
- 3. YOU ARE Wearing the appropriate personal protective equipment.

REMOVING CHEMICALS

CARRY OUT THIS PROCEDURE WHEN THE HOPPER IS LESS THAN 1/4 FULL OF TABLETS

- 1. Switch all chlorine dosing pumps to 'OFF' position *
- 2. Close the inlet valve.
- 3. Remove the tank lid.
- 4. Lift hopper high enough to disconnect the tube connected at the bottom of the hopper. Leave tube facing downwards!
- 5. Empty any remaining contents in the hopper into a CLEAN AND EMPTY Calcium Hypochlorite container.
- 6. Refit lid only.
- 7. Open inlet valve.
- 8. Switch all chlorine dosing pumps to 'MAN' position *

CLEANING THE FLOWTAB

- 1. Whilst the FlowTab is flushing, thoroughly clean the hopper bottom section with clean water. Ensure that the strainer is clear. (This should take at least 10 minutes).
- 2. Switch all chlorine dosing pumps to 'OFF' position *
- 3. Connect the drain tube to drain and open the drain valve.
- 4. Remove lid again and use the disconnected tube as hose to clean around the inside of the tank
- 5. Leave tube facing downwards and replace lid.
- 6. Close the inlet valve.
- 7. Open the flush valve briefly for approx 30 seconds #
- 8. Close the drain valve THEN close flush valve.
- **9.** Remove drain tube.

RESTARTING THE FLOWTAB





3. Replace lid

4. Open inlet valve

Switch all chlorine dosing pumps to 'AUTO' position

(# if no drain tube is provided, use a bucket and reduce flush time)

(* The switching of chlorine dosing pumps is on the FlowTab control panel, NOT the pH/Chlorine controller.

Note: FlowTab fitted with CIP (cleaning in place system) would normally only require hopper and tank cleaning.

melclorite NX

J.A.K. Water Systems Ltd

Unit 1, Scopwick Lodge, Scopwick Heath, Metheringham, Lincolnshire, LN4 3DL Tel: +44(0)1526 322214 Fax: +44(0)1526 322248 Email: sales@jakwater.co.uk